


H4essential Accessibility Installation Guide

Copyright(C) 2024 ZOOM CORPORATION. All Rights Reserved.


Proper display is not possible on grayscale devices.

Introduction

■Item to prepare

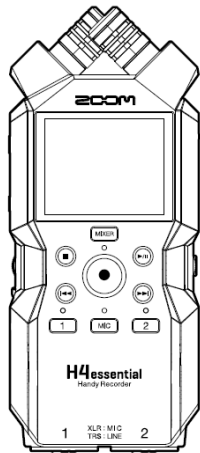

H4essential

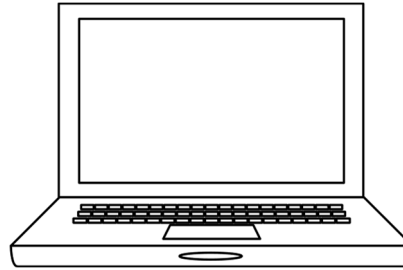

Windows or macOS computer
with Internet access



microSD card

Supported recording media

microSDHC: 4 GB – 32 GB

microSDXC: 64 GB – 1 TB

Always format microSD cards on the
H4essential after purchasing them new
or using them with a different device.

■Accessibility Installation process


1. Download the accessibility installation file.
2. Extract the ZIP file.
3. Copy the extracted accessibility installation file to a microSD card.
4. Install the guide sound accessibility feature.
5. Confirm that the guide sound accessibility feature has been installed correctly.

Installing the Guide Sound Accessibility Feature

This guide explains installing guide sound of English version 1.00 as an example.

1. Download the accessibility installation file.



Download the ZIP file that contains the accessibility installation file from the H4essential download page.

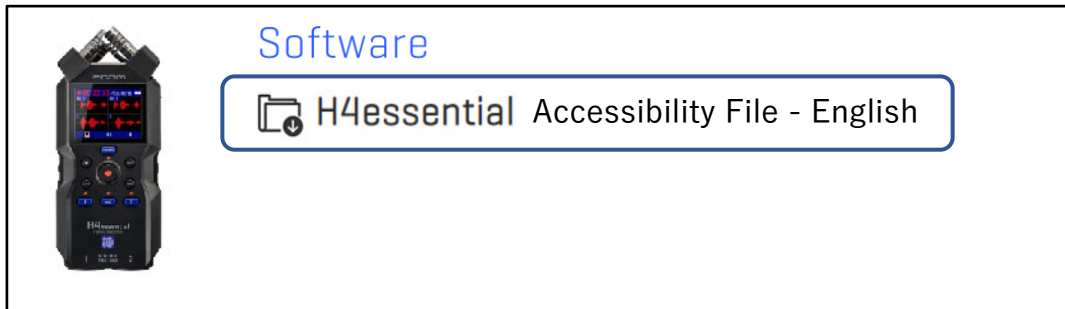


On Windows

2. Extract the ZIP file.

Select the folder that contains the downloaded ZIP file. Click ① “Compressed Folder Tools” and then click ② “Extract all”. This extracts the ZIP file.

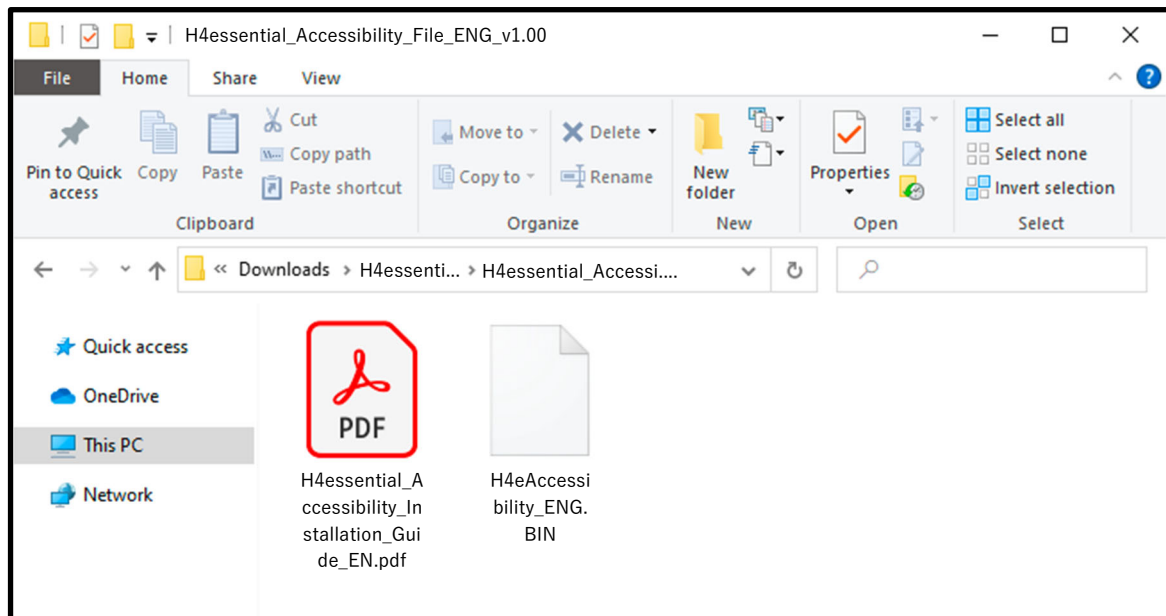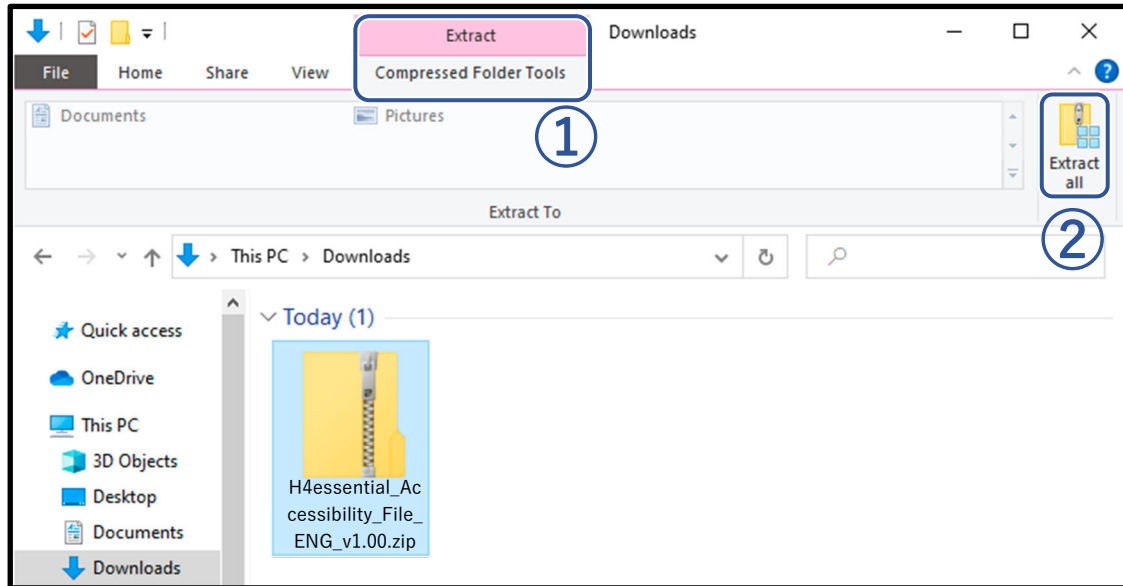


3. Copy the accessibility installation file to a microSD card.
Copy the “H4eAccessibility_ENG.BIN” file to a microSD card.

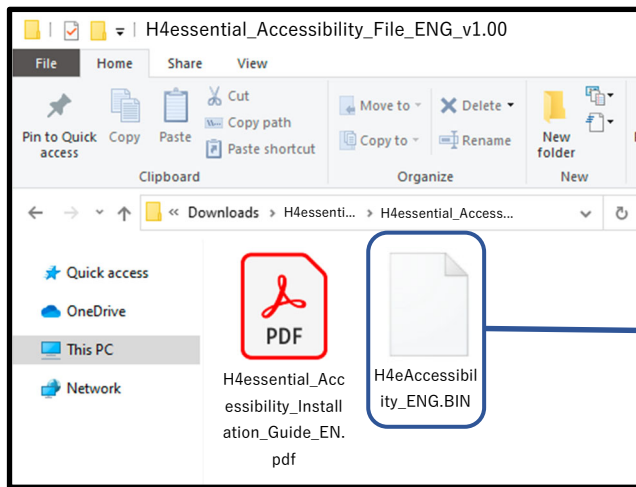

Accessibility installation file

microSD

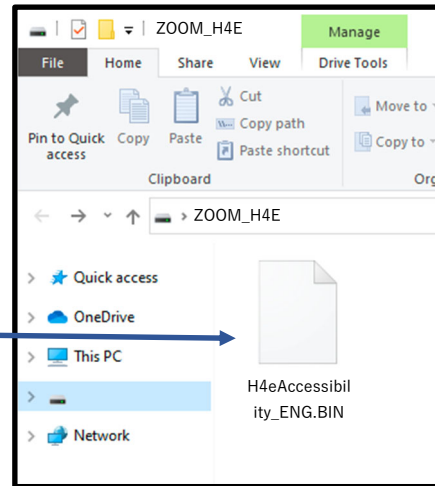


Copy the accessibility installation file to a microSD card.

On macOS


2. Extract the ZIP file.

After downloading, open the ① “Downloads” folder which appears at the right end of the Dock by default. Then, click ②. Downloaded files will be shown.

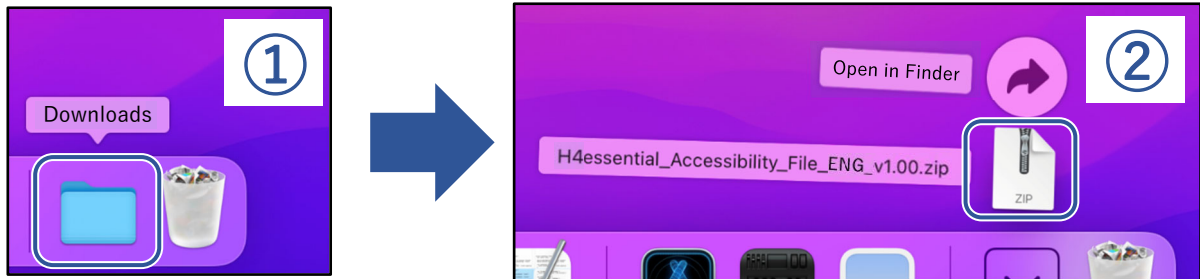

3. Copy the accessibility installation file to a microSD card.

Copy the “H4eAccessibility_ENG” file to a microSD card.

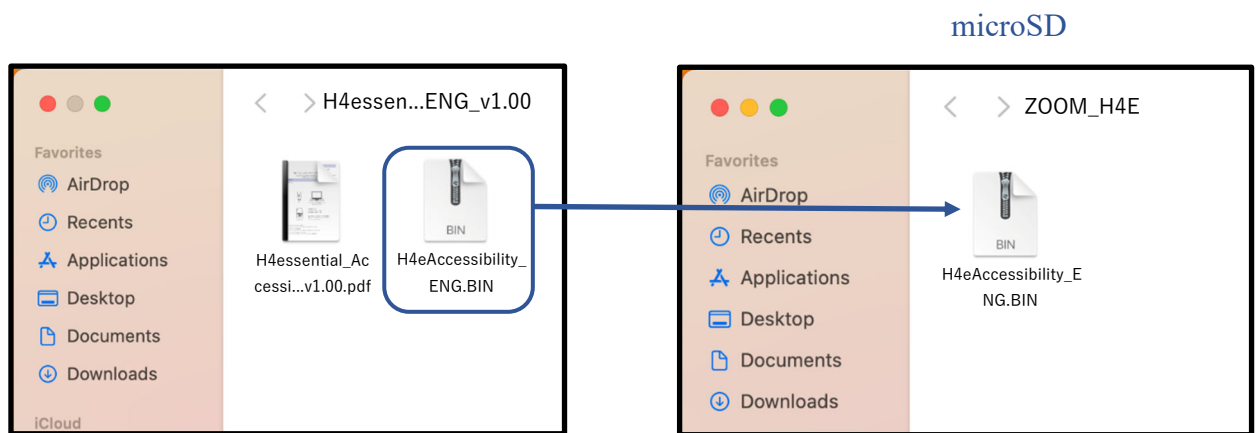

Accessibility installation file

Copy the accessibility installation file to a microSD card.


The following procedures are the same on both Windows and macOS.

4. Install new batteries in the H4essential or connect an AC adapter.


NOTE

The accessibility installing is not possible if the remaining battery power is low.

5. Insert the microSD card into the H4essential.

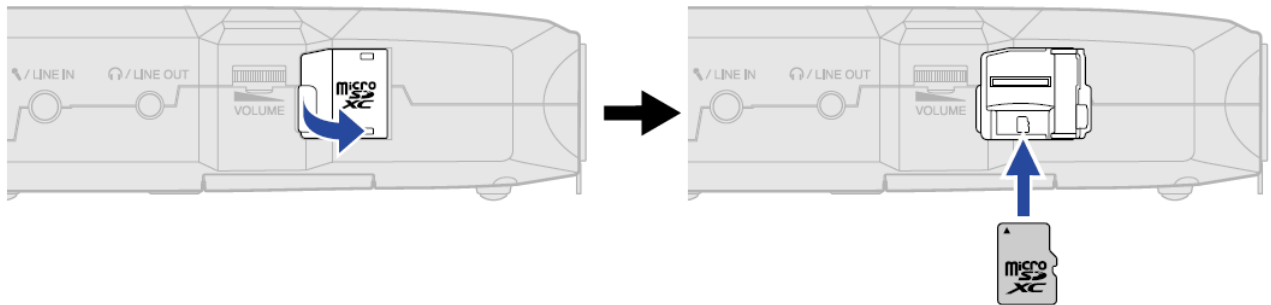


6. Slide  HOLD toward  until the display becomes active.

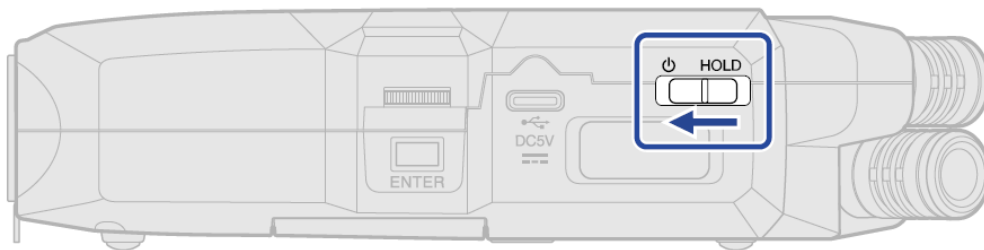


This turns the H4essential power on and opens the Home Screen on the display.

 



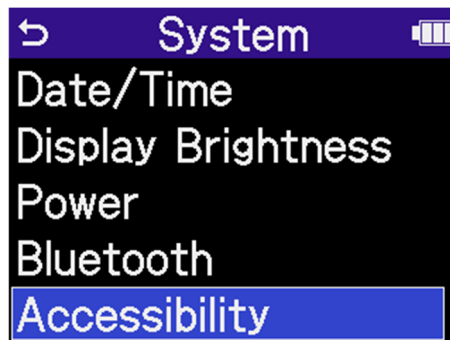
7. On the Home Screen, use  to select  (System) and press  .

 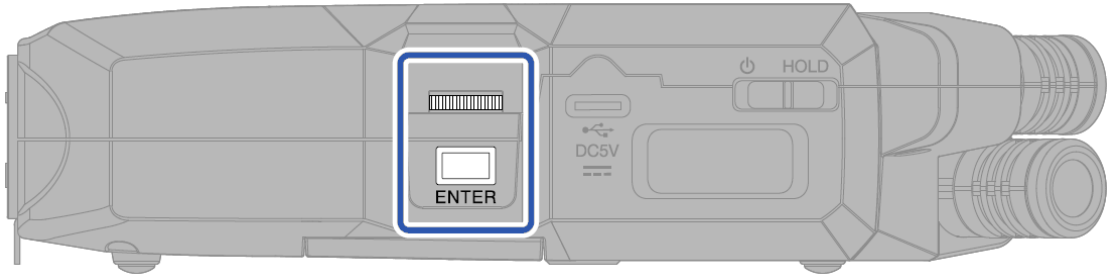



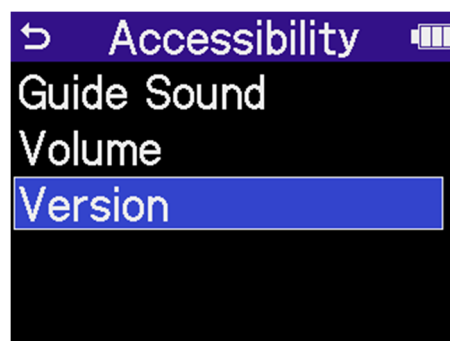
This opens the System Setting Screen.

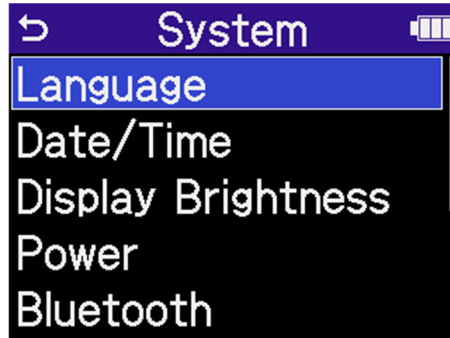



8. Use  to select "Accessibility" and press  .

 



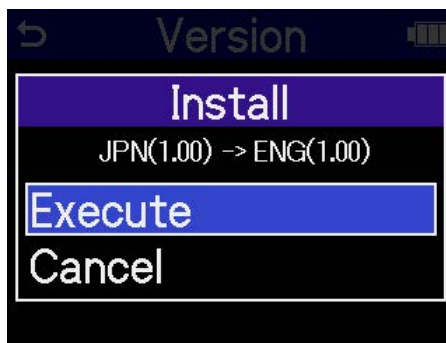
9. Use  to select "Version" and press  .



10. Use  to select “Install” and press  .



11. Use  to select “Execute” and press  .



The installation will be executed.

NOTE

During the accessibility installation, do not turn the power off or remove the microSD card.

If the installation fails, “Please Update Accessibility!” will appear.


If this happens, turn the power off once and confirm that the microSD card is loaded correctly.

Then, turn the power on and try installing again.


Confirm that the guide sound accessibility feature has been installed correctly



Check the guide sound information used by the H4essential.


1. On the Home Screen, use  to select  (System) and press .

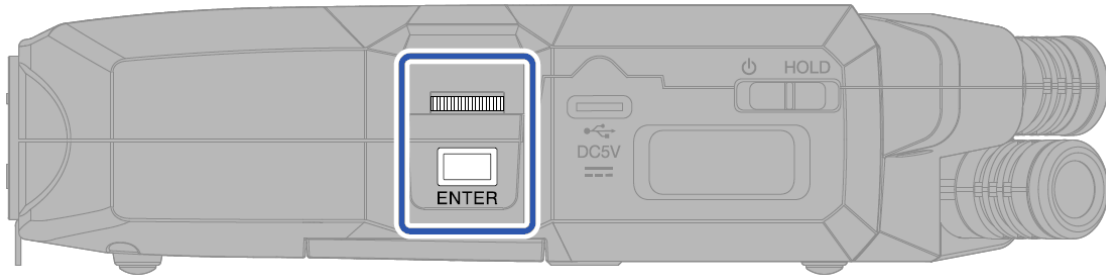

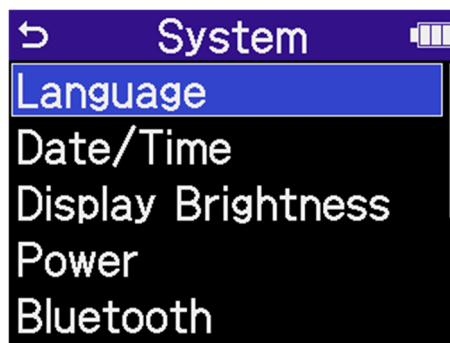


This opens the System Setting Screen.

 

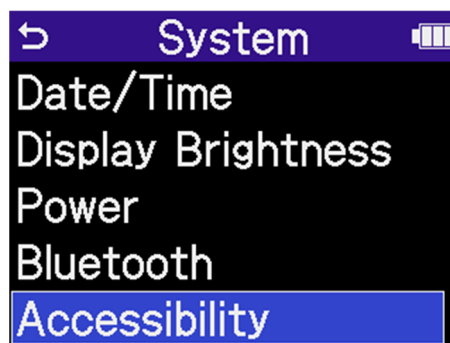
2. Use  to select "Accessibility" and press .



3. Use  to select "Version" and press .

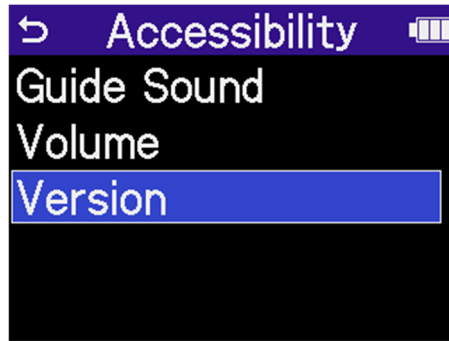

4. Check the language and version used for the accessibility guide sound.

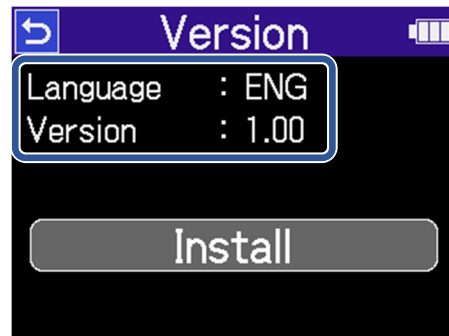

• ZOOM CORPORATION will bear no responsibility for any losses or third-party claims resulting from the use of this software. Moreover, distribution, sale, leasing, rental, alteration, and reverse engineering without permission of this software are prohibited. The specifications of this software and the contents of this document could be changed without notice in the future.

- Copying or reprinting this manual in part or in whole without permission is prohibited.
- Microsoft and Windows are trademarks of the Microsoft corporate group.
- macOS is a trademark of Apple Inc.
- microSDXC logos are trademarks of SD-3C LLC.
- Other product names, registered trademarks and company names in this document are the property of their respective companies.
- All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.
- The illustrations in these instructions might differ from actual screens.