


Warning: Do Not Apply Phantom Power to the F4's Outputs

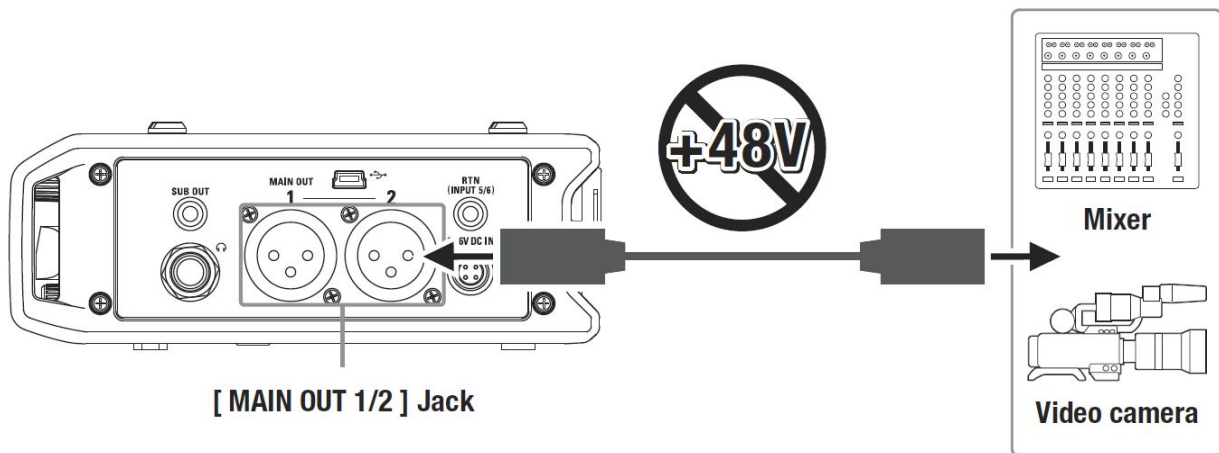

When connecting a video camera or mixer to the MAIN OUT 1/2 jack of the F4, please make sure to turn off any phantom power applied to its input. Since the F4 is not designed to use phantom power, its output circuitry may be damaged.